



Please note the following about the Crazyflie expansion connectors:

- * VCOM is always on power directly from the battery/USB and is not regulated
- * VCC is only on when the system is on and is regulated to 2.8V
- * VUSB is connected directly to the USB which means this will supply at 4.5-5.5V when the USB is connected and can be used for charging the battery when the USB is not connected



Licensed under CC-BY-NC-SA 4.0

Bitcraze AB

Sheet: /

File: usd.sch

Title: Crazyflie 2.0 uSD deck

Size: A4 Date: 2015-12-29

KiCad E.D.A. kicad 4.0.4+e1-630848ubuntu15.04.1-stable

Rev. B

Id: 1/1